

Where Do I Find Everything I Need for
Process Measurement and Control?
OMEGA...Of Course!

Shop online at www.omega.com

TEMPERATURE

- ☒ Thermocouple, RTD & Thermistor Probes,
- ☒ Connectors, Panels & Assemblies
- ☒ Wire, Thermocouple, RTD & Thermistor
- ☒ Calibrators & Ice Point References
- ☒ Recorders, Controllers & Process Monitors
- ☒ Infrared Pyrometers

PRESSURE, STRAIN AND FORCE

- ☒ Transducers & Strain Gages
- ☒ Load Cells & Pressure Gages
- ☒ Displacement Transducers
- ☒ Instrumentation & Accessories

FLOW/LEVEL

- ☒ Rotameters, Gas Mass Flowmeters & Flow
- ☒ Computers
- ☒ Air Velocity Indicators
- ☒ Turbine/Paddlewheel Systems
- ☒ Totalizers & Batch Controllers

pH/CONDUCTIVITY

- ☒ pH Electrodes, Testers & Accessories
- ☒ Benchtop/Laboratory Meters
- ☒ Controllers, Calibrators, Simulators & Pumps
- ☒ Industrial pH & Conductivity Equipment

DATA ACQUISITION

- ☒ Data Acquisition & Engineering Software
- ☒ Communications-Based Acquisition Systems
- ☒ Plug-in Cards for Apple, IBM & Compatibles
- ☒ Data Logging Systems
- ☒ Recorders, Printers & Plotters

HEATERS


- ☒ Heating Cable
- ☒ Cartridge & Strip Heaters
- ☒ Immersion & Band Heaters
- ☒ Flexible Heaters
- ☒ Laboratory Heaters

ENVIRONMENTAL

MONITORING AND CONTROL


- ☒ Metering & Control Instrumentation
- ☒ Refractometers
- ☒ Pumps & Tubing
- ☒ Air, Soil & Water Monitors
- ☒ Industrial Water & Wastewater Treatment
- ☒ pH, Conductivity & Dissolved Oxygen Instruments

M3657 / (N01)

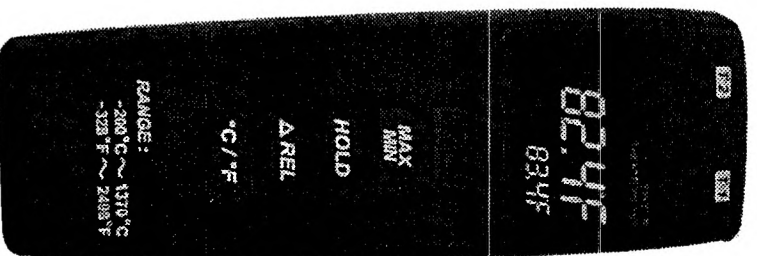

User's Guide

 Shop online at
www.omega.com

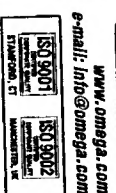

OMEGAETTE™ HH308
Type K Thermometer

CONTENTS

THEMOMETER

TITLE	PAGE
I. Introduction.....	3
II. Specifications.....	3
III. Symbol Definition and Button Location.....	5
IV. Operation Instructions.....	6
4.1 Power-Up.....	6
4.2 Connection the Thermocouples.....	6
4.3 Selecting the Temperature Unit.....	6
4.4 Data-Hold Operation.....	6
4.5 Relative Operation.....	6
4.6 MAX/MIN/AVG Operation.....	7
4.7 Auto Power Off.....	7
4.8 Low Battery Condition.....	7
4.9 Calibration Point.....	7

I. Introduction:

This instrument is a digital thermometer for use with any K-type thermocouple as temperature sensor. Temperature indication follows National Bureau of Standards and IEC584 temperature/voltage table for K-type thermocouples.

II. Specifications:

Numerical Display:

4 digital liquid crystal display

Measurement Range:

-200°C ~ -137.0°C -328°F ~ 2498°F

Resolution:

-200°C ~ 200°C 0.1°C ; 200°C ~ 1370°C 1°C

-200°F ~ 200°F 0.1°F ; 200°F ~ 2498°F 1°F

Maximum Voltage at Thermocouple Input:

60V DC, or 24Vrms AC

Environmental:

☐ Operating Temperature and Humidity:

0°C ~ 50°C (32°F ~ 122°F) ; 0 ~ 80% RH

☐ Storage Temperature and Humidity:

-10°C to 60°C (14°F ~ 140°F) ; 0 ~ 80% RH

☐ Altitude up to 2000 meters.

Sample Rate: 0.6 times per second

Dimension: 164×54×34mm

Weight: Approx. 180g

Accessory:

K Type Bead Probe, Battery, Instruction Menu

Power requirement:

9 Volt Battery, NEDA 1604 or JIS 006P or IEC6F22

Battery Life:

Approx. 150hrs with alkaline battery

Accuracy: at (23 ± 5°C)

Range	Accuracy
-200°C ~ 200°C	±(0.3% reading + 1°C)
200°C ~ 400°C	±(0.5% reading + 1°C)
400°C ~ 1370°C	±(0.3% reading + 1°C)
-328°F ~ -200°F	±(0.5% reading + 2°F)
-200°F ~ 200°F	±(0.3% reading + 2°F)
200°F ~ 400°F	±(0.5% reading + 2°F)
400°F ~ 2498°F	±(0.3% reading + 2°F)



Temperature Coefficient:

For ambient temperatures from 0°C ~ 18°C and 28°C ~ 50°C, for each °C ambient below 18°C or above 28°C add the following tolerance into the accuracy spec.

0.01% of reading + 0.03°C
(0.01% of reading + 0.06°F)

Δ Note:

The basic accuracy Specification does not include the error of the probe please refer to the probe accuracy specification for additional details.

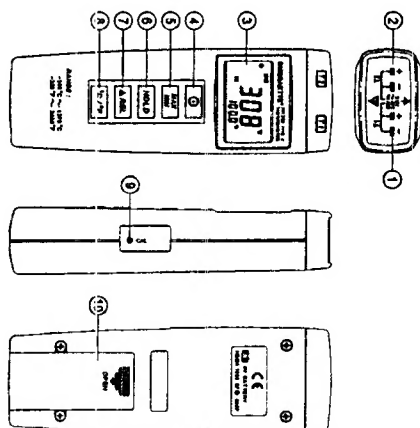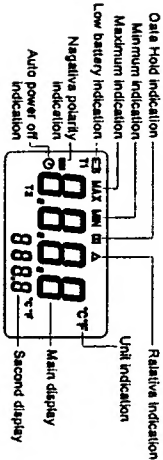III. Symbol Definition and Button Location:

- ① T1 K type temperature sensor connector
- ② T2 K type temperature sensor connector
- ③ LCD display
- ④ ON/OFF button
- ⑤ MAX MIN Average control button
- ⑥ HOLD button
- ⑦ Relative readout button
- ⑧ °C, °F control button
- ⑨ Offset calibration screw
- ⑩ Battery cabinet cover

IV. Operation Instructions:

4.1 Power-Up

Press the \odot key to turn the thermometer On or OFF.

4.2 Connection the Thermocouples

For measurement, plug the thermocouple into the input connectors.

4.3 Selecting the Temperature Unit

When the meter was power on, the default unit is Celsius ($^{\circ}\text{C}$) scale. The user may change it to Fahrenheit ($^{\circ}\text{F}$) by pressing " $^{\circ}\text{C}/^{\circ}\text{F}$ " button and vice versa to Celsius.

4.4 Data-Hold Operation

The user may hold the present reading and keep it on the display by pressing the "HOLD" button. When the hold data is no longer needed, one may release the data-hold operation by pressing "HOLD" button again. When the meter is under Data Hold operation, the " ΔREL ", "MAX/MIN and " $^{\circ}\text{C}/^{\circ}\text{F}$ " button are disabled.

4.5 Relative Operation:

When one press the " ΔREL " button, the meter will memorize the present reading and the difference between the new reading and the memorized data will be shown on the display. Press the " ΔREL " button again to exit the Relative operation.

4.6 MAX/MIN Operation:

When one press the MAX/MIN button the meter will enter the MAX/MIN mode. Under this mode the maximum value and minimum value is kept in the memory simultaneously and updated with every new data.

When the MAX symbol is display, the Maximum is shown on the display.

Press MAX/MIN again, then the MIN symbol is on the display and also the minimum reading.

Press MAX/MIN again, MAX, MIN will blink together. This means that all these data is updated in the

memory and the reading is the present temperature. One may press MAX/MIN to circulate the display mode among these options.

When the meter is under MAX/MIN operation, " ΔREL " and " $^{\circ}\text{C}/^{\circ}\text{F}$ " are disabled.

To exit the MAX/MIN mode, one may press end hold MAX/MIN for two seconds.

4.7 Auto Power Off:

By default, when the meter is powered on, it is under auto power off mode. The meter will power itself off after 30 minutes if no key operation is performed. Key combination at power on can disable auto power off. One may press and hold "HOLD" button and then power on the meter and auto power off symbol will disappear to indicate that auto power off is disabled.

4.8 Low Battery Condition

When the battery voltage is under proper operation requirement, the E3 symbol will show on the LCD and the battery need to be replaced with new one.

4.9 Calibration Point:

Room Temperature $23 \pm 3^{\circ}\text{C}$			
Input	Adjust VR	tolerance	
0°C	VR3	$\pm 0.1^{\circ}\text{C}$	
190°C	VR2	$\pm 0.1^{\circ}\text{C}$	
1000°C	VR1	$\pm 1^{\circ}\text{C}$	
190°F	VR4	$\pm 0.1^{\circ}\text{F}$	

Normally, performing offset Calibration with thermal stabled ice water through VR3 will give a very good calibration result.

OMEGA's On-Line Service Internal e-mail
www.omega.com info@omega.com

Servicing North America:

USA:
One Omega Drive, Box 4047
Stamford CT 06907-0047
Tel: (203) 359-1660
e-mail: info@omega.com

Canada:
976 Binger
Laval (Quebec) H7L 5A1
Tel: (514) 856-6728 FAX: (514) 856-6886
e-mail: info@omega.ca

For immediate technical or application assistance:
USA and Canada: Sales Service: 1-800-832-6342 / 1-800-TC-OMEGA
Customer Service: 1-800-422-2378 / 1-800-622-BEST
Engineering Service: 1-800-872-9456 / 1-800-USA-WHEN
TELEX: 996404 EASYLINK 62968934 CABLE: OMEGA
FAX: (001) 203-359-7807 e-mail: esp@omega.com
info@omega.com.mx

Mexico:
En Espanol: (011) 203-359-7803 e-mail: esp@omega.com

Benelux:
Postbus 8034, 1180 LA Amsterdam, The Netherlands
Tel: +31 (0)20 3472121 FAX: +31 (0)20 6434643
e-mail: info@omega.com

Czech Republic:
Rudé armády 1868, 233 01 Karišná 8
Tel: +420 (0)69 6311899 FAX: +420 (0)69 6311114
Toll Free: (0800-1-66342 e-mail: czech@omega.com

France:
9 rue Denis Papin, 78190 Trappes
Tel: +33 (0)1 30 62 1400 FAX: +33 (0)1 30 69 120
Toll Free in France: (0800-446342
e-mail: france@omega.com

Germany/Austria:
Daimlerstrasse 26, D-75392 Deckelfrom, Germany
Tel: +49 (0)7066 93984-0 FAX: +49 (0)7066 9398-29
Toll Free in Germany: (0800 639 7678
e-mail: germany@omega.com

United Kingdom:
One Omega Drive, River Bend Technology Centre
Northwick, Leam, Manchester
M14 5SD United Kingdom
Tel: +44 (0)161 777 6611 FAX: +44 (0)161 777 6622
Toll Free in United Kingdom: (0800-488-488
e-mail: sales@omega.co.uk

It is the policy of OMEGA to comply with all worldwide safety and EMC/EMI standards. OMEGA products are designed to meet or exceed all applicable standards. OMEGA will add the CE mark to every appropriate device upon certification. The information contained in this document is believed to be correct, but OMEGA Engineering, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice. **WARNING:** These products are not designed for use in, and should not be used for, patient-connected applications.

WARRANTY/DISCLAIMER

OMEGA ENGINEERING, INC. warrants this unit to be free of defects in materials and workmanship for a period of 12 months from the date of purchase. OMEGA's WARRANTY adds an additional one (1) month grace period to the normal one (1) year product warranty to cover handling and shipping time. This assures that OMEGA's customers receive maximum coverage on each product. If the unit malfunctions, it must be returned to the factory for evaluation. OMEGA will repair or replace the unit at no charge. Upon return of the unit, OMEGA will immediately upon phone or written request. Upon examination by OMEGA, if this unit is found to be defective, it will be repaired or replaced at no charge. OMEGA's WARRANTY does not apply to malfunctions resulting from any action of the purchaser, including but not limited to mishandling, improper installation, use of non-OMEGA components, or use of the unit for purposes not intended by OMEGA. OMEGA's WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of having been damaged as a result of excessive corrosion, or current, heat, moisture or vibration, improper operation, or use of the unit for purposes not intended by OMEGA. OMEGA's control points, fuses, and fuses are not warranted, including but not limited to contact points, fuses, and fuses.

OMEGA is pleased to offer suggestions on the use of the various products. However, OMEGA neither assumes responsibility for any conditions or errors nor assumes liability for any damages that result from the use of its products. OMEGA warrants only that the parts manufactured by it will be as specified and free of defects. OMEGA MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, MERCHANTABILITY, FITNESS FOR PARTICULAR PURPOSES AND HEREBY DISCLAIMS, LIMITATION OF LIABILITY. The responsibility of purchaser set forth herein are absolute, and the total liability of OMEGA with respect to this order, whether based on contract, warranty, or otherwise, shall be limited to the purchase price of the product. OMEGA shall OMEGA be liable for consequential, incidental or special damages. CONNOTIONS: Equipment sold by OMEGA is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity, or (2) in medical applications or used on humans, animals, or plants. OMEGA is not responsible for any damage, injury, loss, or medical application, used on humans or animals in any way. OMEGA assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and, additionally, purchaser will indemnify OMEGA and hold OMEGA harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

RETURN REQUESTS / INQUIRIES

Direct all warranty and repair requests/inquiries to the OMEGA Customer Service Department. All requests must be accompanied by a copy of the PURCHASER'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be mailed on the outside of the return package and on any correspondence. The purchaser is responsible for shipping charges, freight, insurance and proper packaging to protect the device in transit.

FOR WARRANTY RETURNS: Please have the following information available BEFORE contacting OMEGA: 1. Purchase Order number under which the product was PURCHASED. 2. Model and serial number of the product. 3. Repair instructions and/or specific problems relative to the product.

OMEGA's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. OMEGA is a registered trademark of OMEGA ENGINEERING, INC. © Copyright 2001 OMEGA ENGINEERING, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium in machine-readable form, in whole or in part, without the prior written consent of OMEGA ENGINEERING, INC.